



## Filter Technologies

**EGO<sup>3</sup> filters clearer, longer, cheaper and save the environment!**

**EGO<sup>3</sup> filters have 10 µm separation precision of the 3D filter material - are reusable - dirt stays in the filter - easier to clean - long lifespan - filter material made from recycled material.**

### **Great filter performance**

- Filters up to 5 times more finely (10 µm separation precision instead of 50 µm for conventional filters)
- Much bigger filter volume through the use of 3D filter material, creating a gigantic filter surface
- Additional disinfection of filter material from the built-in silver component
- No blockages (meaning that the spa is always able to heat, circulate and disinfect)
- Sediment always remains in the filter until the filter material is completely depleted, even while the filter is being unscrewed and removed

### **Saving time and money**

- Very economical through reuse of the filter chamber and the filter material
- Quick and easy cleaning of the EGO<sup>3</sup> filter balls
- Long service life (the EGO<sup>3</sup> filter balls can be reused up to six times)
- Savings in terms of spa chemicals (e.g. flocculating agents)
- Energy-saving (the filter is virtually neutral in terms of the flow rate)
- Longer pump service life

### **Sustainability**

- Reduction in waste, because reusable
- Filter material made from recycled material



**Trust your EGO<sup>3</sup> FILTERS**  
**THE BETTER WAY TO FILTER YOUR SPA WATER!**

# Filter Technologies

## Getting started

It's really easy: Open the cover – Put 12-14 EGO<sup>3</sup> filter balls inside  
Close firmly – And off you go!



## Detailed description

1. The reusable filter chamber consists of 3 parts, the filter chamber, a lid and a mesh insert.
2. Open the bag with the filter balls.
3. Open the filter chamber by turning the lid into its center position.
4. Make sure that the mesh insert is seated straight in the filter chamber. Never use the filter without it's mesh insert.
5. Take a maximum of 12-14 filter balls from the bag and fill the filter chamber with them. The balls must always have enough space around them. Never compress them because this would restrict flow, it would squash the filter balls, and these would then become matted and block the filter. This would seriously impact filter operation and could cause complete blockage.
6. Now close the lid by turning it clockwise until it clicks into place and install the filter in the spa.

## Cleaning

The EGO<sup>3</sup> filter balls are washable and reusable. This reduces the filter costs big time!

1. Clean the filter balls after 6-12 weeks. To do this, remove the filter chamber from the spa.
2. Do not open the lid until you have removed the filter chamber. This will keep any dirt inside the filter chamber. Now open it up and remove the filter balls.
3. Wash them carefully under running water. Squeeze the filter balls like you would a sponge until they return to their original colour.
4. After that, place the balls in a container filled with clean water for about 20 minutes and add a tea-spoonful of chlorine granules. This also helps to disinfect the filter balls.
5. After 20 minutes, drain the container and rinse the EGO<sup>3</sup> filter balls once again in clean water. You can now put the balls back into the filter chamber.
6. The filter balls have a service life of roughly 3-6 wash cycles. Do not reuse completely deformed filter balls or filter balls that are falling apart. Instead, remove them and replace them with new ones.

## Available as

EGO<sup>3</sup> Filter Cartridge - F2M

EGO<sup>3</sup> Refill 300 gram

EGO<sup>3</sup> Filter Cartridge - P4

EGO<sup>3</sup> Refill 600 gram

EGO<sup>3</sup> Filter Cartridge - F2S

EGO<sup>3</sup> Filter Cartridge - P3

EGO<sup>3</sup> Filter Cartridge w Hole - Light Grey – Dark Grey - White

---

## Warnings

The EGO<sup>3</sup> filter balls may not be used for any purpose other than that described here. Do not use filter balls with loose parts/fibres. Do not reuse crushed filter balls. Only ever clean filter balls by hand. Never over-fill the filter chamber. Never use without the filter chamber, filter lid or mesh insert! Always cover the filter lids with 4-5 cm of water. This prevents air from being drawn in by suction. Always use genuine EGO<sup>3</sup> filter materials! Failure to do this can damage the spa and its components. Keep safely away from children! This will prevent them from swallowing loose parts, or trapping their fingers when turning the lid.