


CoverMate Easy

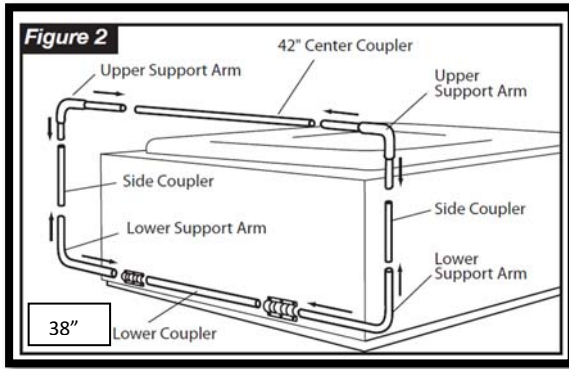

Includes

- Black powder-coated, rust-free aluminum tubing
- Easy-to-install, non-corrosive mounting brackets
- UV resistant nylon catch straps provide a more stylish look compared to chains
- Easy 15-minute installation
- Foam grip for comfortable handling
- TowelMate for hanging up to three towels

- | |
|---|
| ○ Requires 18 inches clearance behind spa and 4 to 5" on each side |
| ○ Brackets can be mounted to kick plate under the spa, skirting or deck |
| ○ Brackets must be mounted 38" apart |
| ○ Fits most spas from 6 feet to 8 feet in length and width |

Dimensions

- ✓ Plastic Bracket: 4 1/2" L x 2 1/2" W - same as CoverCatch and TowelBar
- ✓ Support Arm: 20" x 40"
- ✓ Upper Coupler Bar: 42"
- ✓ Lower Coupler Bar: 38"
- ✓ Side Coupler Bar: 38"
- ✓ Nylon Catch Strap: 20 3/4"