


Step #1

Attach the ModStep side rail bracket to the side of the step you want your rail to be attached to using the supplied 1/4 x 3/4" flat head screws, 1/4 flat washers, 1/4 nylon locknuts and (4) of the #10 x 5/8" self-drilling screws (see Fig. 1).

Step #2

Slide the ModStep rail triangle tab over the bottom of the Safe-T-Rail. Next, slide the Safe-T-Rail into the ModStep side rail bracket (see Fig. 2). Attach the ModStep rail triangle tab to the top of the ModStep riser using the (2) #10 x 5/8" self-drilling screws (see Fig. 2). Finish securing the Safe-T-Rail to the ModStep side rail bracket using (4) #10 x 5/8" self-drilling screws (see Fig. 2).

Figure 1

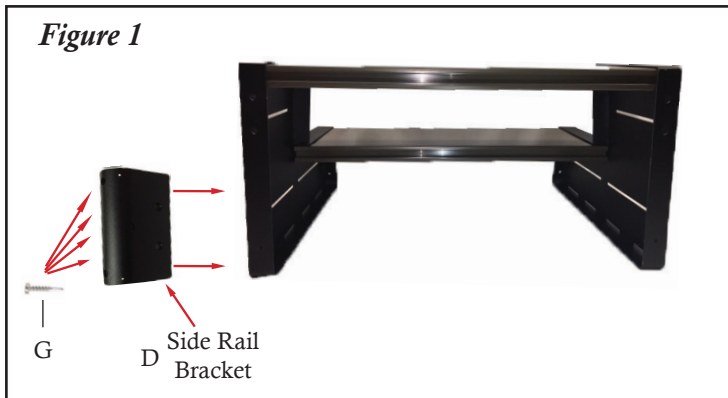

ITEM	PART#	DESCRIPTION	QTY
A	101396	1/4 x 3/4" FLAT HEAD MACHINE SCREW - SS	2
B	100608	1/4 FLAT WASHER	2
C	100607	1/4 NYLON LOCKNUT	2
D	101491	MODSTEP SIDE RAIL BRACKET	1
E	101853	MODSTEP RAIL TRIANGLE TAB	1
F	100294	MODSTEP SAFE-T-RAIL	1
G	100013	#10 X 5/8" SELF-DRILLING SCREWS	10
H	100016	SMALL BLACK DOME CAPS	10

Figure 2

