

MS300AVU Tech Sheet

Master Spas System PNs 56852-01 & 59359

System Model # VSP-MS300AVU-CCAJ
Software Version # 41
EPN # 5317

System PN 56852-01 = 4.0kW 800 Inc
System PN 59359 = 4.0kW 825 Inc

Base PCBA - PN 56853-01



System Revision History

System PN	EPN	Date	Requested By	Changes Made
55506	2899	06.31.08	Balboa	New system - VS300 with AV connector
56852	N/A	10.06.16	Customer	Spun off system with DIP switch A2 OFF.
56852-01	4805	11.08.16	Customer	Add second setup with all 120V. Add J71 & J72
59359	5317	09.20.19	Customer	Add 825 Inc version.

Basic System Features and Functions

Power Requirements

- 120/240VAC, 60Hz, 16A*/32A, Class A GFCI-protected service (Circuit Breaker rating = 20A*/40A max.)
- 3 wires [hot, neutral, ground] or 4 wires [hot, hot, neutral, ground]

* IMPORTANT: When using a GFCI cord, the service maximum is 12A because the GFCI cord breaker is 15A. The 16A service listed above (and on the system label) is only available if using a wall-mount 20A GFCI breaker.

System Outputs

Setup 1 (As Manufactured)

- 240V Pump 1, 2-Speed
- 240V Ozone *
- 240V AV (Stereo)
- 12V Spa Light
- 4.0kW @ 240V heater**
- VL401, VL403, or VL406U Panel (DIP switch A3 must be OFF)

Setup 2

- 120V Pump 1, 2-Speed
- 120V Ozone *
- 120V AV (Stereo)
- 12V Spa Light
- 1.0kW @ 120V heater (labeled 4.0kW @ 240V)**
- VL401, VL403, or VL406U Panel (DIP switch A3 must be OFF)

Optional Panels (for both Setups)

- VL200, VL240, or VL260 Panel (DIP switch A3 must be ON)

* Ozone runs with P1-low and must be same voltage as Pump 1.

** Heater wattage is rated at 240V. When running 120V to heater, output is approximately 25%.

Additional Options

- MoodEFX Lighting
Connects to Spa Light terminal J20
- FiberEFX Lighting
Connects to Spa Light terminal J20

Basic System Features and Functions

Any time you change a DIP Switch, other than A1, you must reset Persistent Memory for your new DIP Switch Settings changes to take effect. If you do not reset Persistent Memory, your system may function improperly.

To reset Persistent Memory:

- Power down by disconnecting power source from spa.
- Put a jumper across J43, covering both pins. (See illustration below)
- Power up by connecting power source to spa.
- Wait until “P” is displayed on your panel.
- Power down again.
- Remove jumper from J43 (May also move to cover 1 pin only)
- Power up again.

About Persistent Memory and Time of Day Retention:

This system uses memory that doesn't require a battery to store a variety of settings. What we refer to as Persistent Memory stores the filter settings, the set temperature, and the heat mode.


Persistent Memory is not used for Time of Day. Only models with a Serial Deluxe panel installed (VS5xxDZ and GS5xxDZ) can display the time. However, during power loss to the spa, the system will lose the correct time, and reset to 12:00 PM when power is restored.

Power Up Display Sequence

Upon power up, you should see the following on the display:

- Three numbers in a row, which are the SSID (the System Software ID). The third display of these numbers is the Software Version, which should match the version of your system. For example, if these three numbers are 100 67 38, that is a VS511SZ at version 38.
- Displayed next is: “24” (indicating the system is configured for a heater between 3 and 6 kW) or “12” (indicating the system is configured for a heater effectively* between 1 and 3 kW). “24” should appear for all VS models running at 240VAC. “12” should appear for all VS models running at 120VAC, as well as all GS models. (*A heater which is rated at 4 kW at 240VAC will function as a 1 kW heater at 120VAC.)
- “P” will appear to signal the start of Priming Mode.


At this point, the power up sequence is complete. Refer to the Reference Card for the VS or GS System model of your spa for information about how the spa operates from this point on, including how to adjust the Time of Day if using a Serial Deluxe style panel.

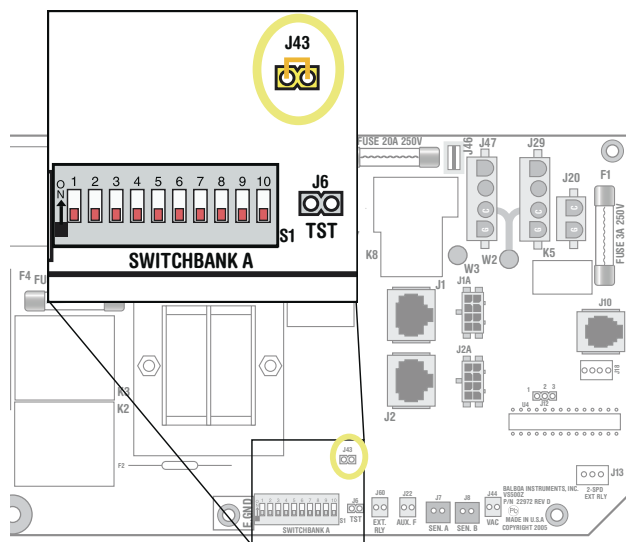

Wiring Configuration and DIP Settings

Setup 1 (As Manufactured)

- 240V Pump 1, 2-Speed
- 12V Spa Light
- 240V Ozone
- 240V AV (Stereo)
- 240V 4.0kW Heater
- VL401, VL403, or VL406U Main Panel

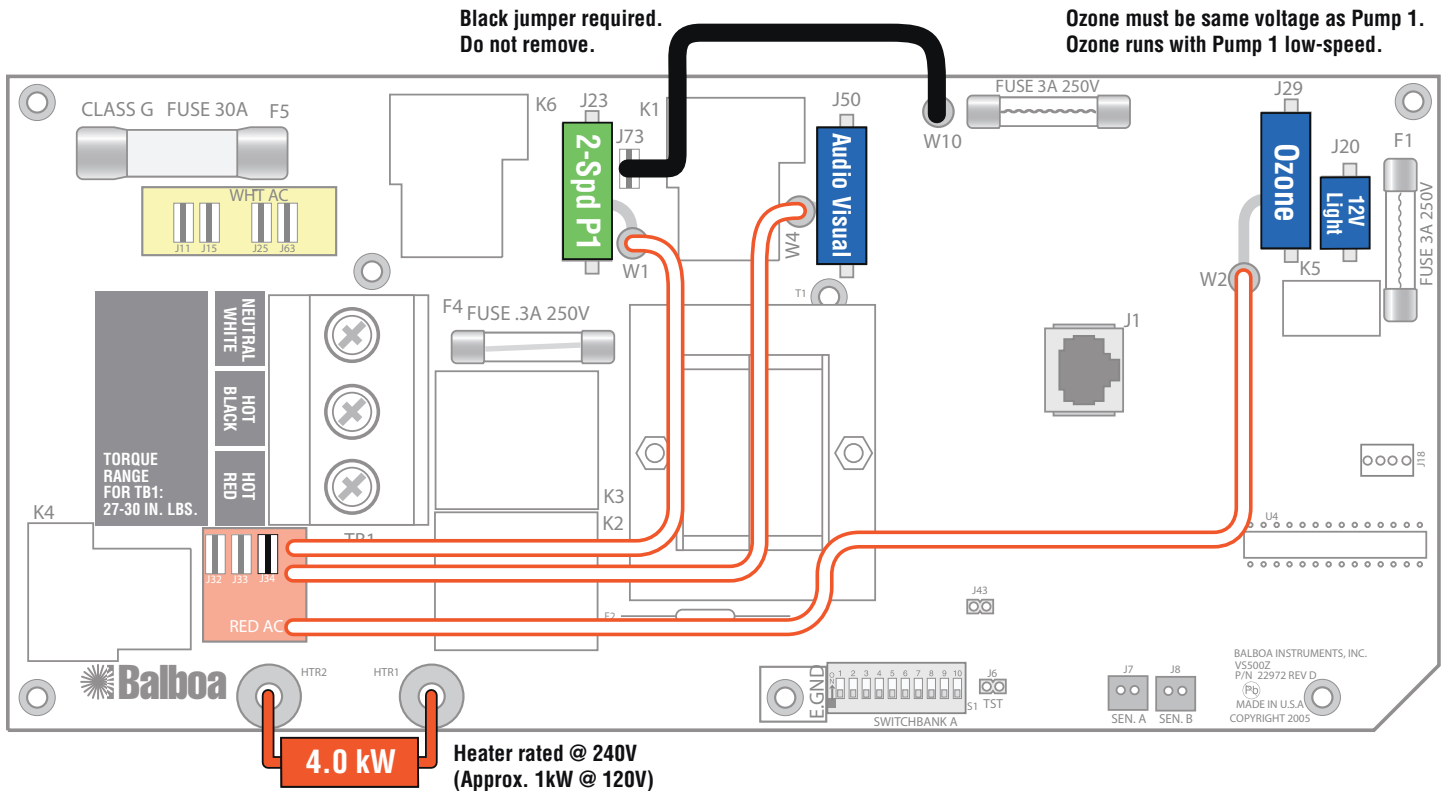


WARNING: Main Power to system should be turned OFF BEFORE adjusting DIP switches.

WARNING: Persistent Memory (J43) must be RESET to allow new DIP switch settings to take effect. (See Persistent Memory page)

SSID #

100
59
41

Switchbank A



- | | |
|------------------------------|-----------------------------|
| A1, Test Mode OFF | A6, 60 Hz |
| A2, Un, P1, TE, LT | A7, Mode changes allowed |
| A3, Duplex Panel | A8, Degrees F |
| A4, N/A (must be OFF) | A9, P1-low timeout, Table 1 |
| A5, P1-high timeout, Table 1 | A10, High Amp mode |



Panel Button Assignments

- | | |
|----------|---------|
| 1=Unused | 3=Temp |
| 2=Pump 1 | 4=Light |

Panel Button Positions



Wiring Color Key

- 120 Volt Connections
- 240 Volt Connections
- Black AC Jumpers
- 12 Volt Connections
- Relay Control Wires

Board Connector Key


- 1 Typically Line voltage
- 2 Typically Line voltage for 2-speed pumps
- 3 Neutral (Common)
- 4 Ground

Note flat sides in connector

Wiring Configuration and DIP Settings

Setup 2

- 120V Pump 1, 2-Speed
- 12V Spa Light
- 120V Ozone
- 120V AV (Stereo)
- 120V 1.0kW Heater (labeled 4.0kW @ 240V)
- VL401, VL403, or VL406U Main Panel

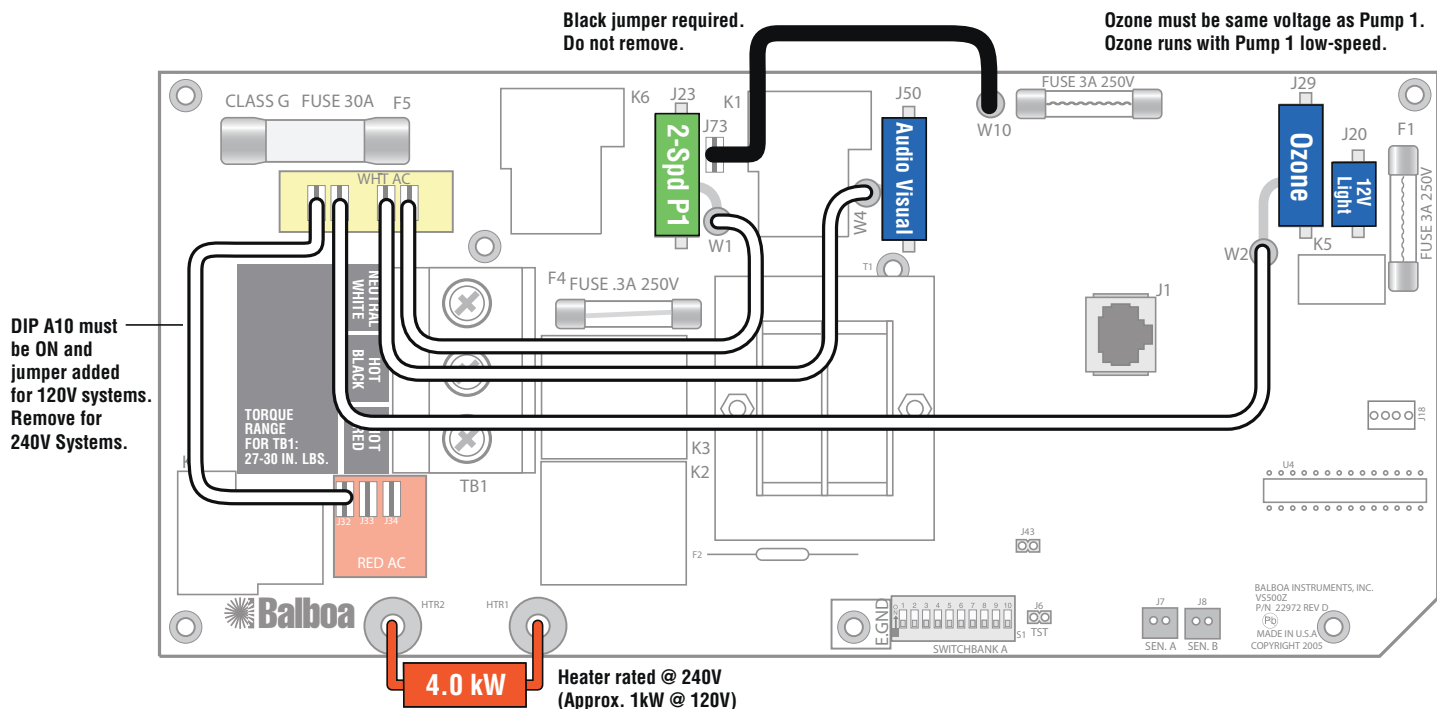


WARNING: Main Power to system should be turned OFF BEFORE adjusting DIP switches.

WARNING: Persistent Memory (J43) must be RESET to allow new DIP switch settings to take effect. (See Persistent Memory page)

SSID #

100
59
41

Switchbank A



- | | |
|------------------------------|-----------------------------|
| A1, Test Mode OFF | A6, 60 Hz |
| A2, Un, P1, TE, LT | A7, Mode changes allowed |
| A3, Duplex Panel | A8, Degrees F |
| A4, N/A (must be OFF) | A9, P1-low timeout, Table 1 |
| A5, P1-high timeout, Table 1 | A10, Low Amp mode |



Panel Button Assignments

- | | |
|----------|---------|
| 1=Unused | 3=Temp |
| 2=Pump 1 | 4=Light |

Panel Button Positions



Wiring Color Key

- 120 Volt Connections
- 240 Volt Connections
- Black AC Jumpers
- 12 Volt Connections
- Relay Control Wires

Board Connector Key

- 1 Typically Line voltage
- 2 Typically Line voltage for 2-speed pumps
- 3 Neutral (Common)
- 4 Ground

Note flat sides in connector

DIP Switches and Jumpers Definitions

SSID 100 59 41

Base Model VS300F

DIP Switch Key

- A1 Test Mode (normally OFF)
- A2 "ON" position: Button layout will be: Pump 1, Light, Temp Down, Temp Up *
- "OFF" position: Button layout will be: Unused, Pump 1, Temp, Light
- A3 "ON" position: use Mini Panel * 
- "OFF" position: use Lite Duplex or Digital Duplex panel  
- A4 N/A (must be OFF)
- A5 Pump 1 high-speed timeout, see Table 1
- A6 "ON" position: 50Hz operation
- "OFF" position: 60Hz operation
- A7 "ON" position: Standard mode only
- "OFF" position: Std/Ecn/Sleep mode changes allowed
- A8 "ON" position: temperature is displayed in degrees Celsius
- "OFF" position: temperature is displayed in degrees Fahrenheit
- A9 Pump 1 low-speed timeout, see Table 1
- A10 "ON" position: heater is disabled while the high-speed pump is running (low amperage mode)
- "OFF" position: heater can run while the high-speed pump is running (high amperage mode)

Table 1		Pump 1 Timeouts	
A5	A9	Low-spnd	Hi-spnd
OFF	OFF	2 hours	15 min
ON	OFF	2 hours	30 min
OFF	ON	15 min	15 min
ON	ON	30 min	30 min

* Panels with button layout  are not compatible when A2 or A3 is ON.

Note: No blower or second pump available.


Jumper Key

- J43** When jumper is placed on 2 pins during power-up, system will reset persistent memory.
- Leave on 1 pin only to enable persistent memory feature.

WARNING:

- Setting DIP switches incorrectly may cause abnormal system behavior and/or damage to system components.
- Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system.
- Contact Balboa if you require additional configuration pages added to this hot sheet.

Panel Button Positions

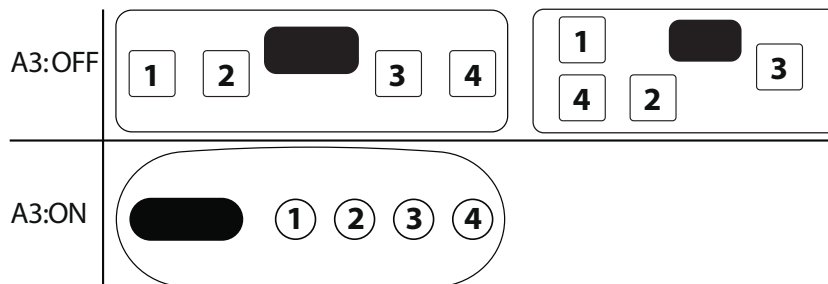

Panel Button Assignments

A2:OFF	1=Unused 2=Pump 1	3=Temp 4=Light
A2:ON	1=Pump 1 2=Light	3=Temp Down 4=Temp Up

Ozone Connections

Ozone voltage must be wired to same voltage as Pump 1.

Ozone Connector Voltage: The VS300/VS300F circuit board is factory configured to deliver a preset voltage (120V or 240V) to the on-board ozone connector (J29). See the ratings table on the wiring diagram attached to the cover of the enclosure for the configured voltage. For 240V output W2 connects to Red AC and for 120V output W2 connects to White AC.


The voltage to the ozone connector can be changed in the field if required. W2 just needs to be set for the required voltage. **Reminder: Ozone voltage must be set to match Pump 1 voltage.**

Balboa Ozone Generator: If the board is set up to operate a 120V ozone generator, the connector on the ozone generator is likely to be configured correctly, but should be compared to the illustration below.

If a 240V ozone generator is required, be sure the red wire in the ozone cord is positioned in the connector next to the green ground wire as described below.

Note: A special tool is required to remove the pins from the connector body once they are snapped in place. Check with your Balboa Account Manager for information on purchasing a pin-removal tool.

Balboa Ozone connector configuration for 120V 60Hz

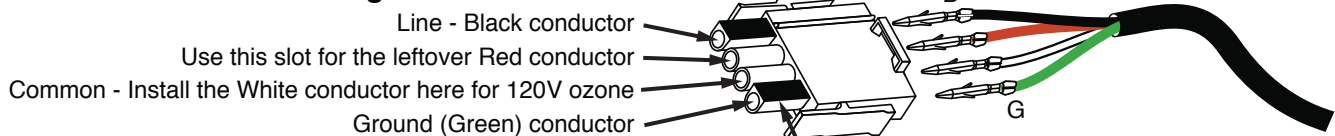

Balboa Ozone connector configuration for 240V 60Hz

